

OPERATION


WEAPON SIGHTING

The Force-on-Force Mandible uses a soft, flexible protective fabric with foam inserts that conform to your weapon stock to enable sighting while in use.



STEP-IN VISOR ATTACHMENT

- 1 Slide the Step-In Visor attachment clip into the rail tracks on the mandible arms.
- 2 Attach the Step-In Visor to the attachment clips.

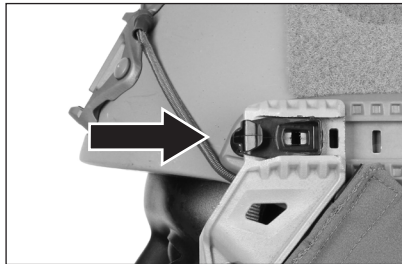

CLEANING AND CARE

1. Spot-clean rigid components with a mild detergent and water.
2. Visually check the components for signs of breakage.
3. Clean dust and dirt by using air pressure.

NOTE: IF ANY DEFECTS ARE FOUND, THE DAMAGED COMPONENTS SHOULD BE REPLACED BEFORE USE.

www.ops-core.com



FORCE-ON-FORCE MANDIBLE

OPERATOR'S MANUAL



Helmet not included

For helmets equipped with Ops-Core® ARC Rails

This product is covered by one or more patents.
For more information visit www.gentexcorp.com/patents

UM-1053 REV-A

© 2019 Gentex Corporation. Ops-Core is a registered trademark of Gentex Corporation or its affiliates.

INTRODUCTION


ABOUT YOUR FORCE-ON-FORCE MANDIBLE

The Ops-Core Force-on-Force Mandible is a lightweight, one size fits all accessory that offers protection from training munitions as well as blunt impact protection. The mandible is Compatible with any helmet equipped with Ops-Core ARC Rails.

INSTALLATION

1 ATTACH TO ARC RAILS

Slide the dovetail of the attachment arms into the top rail tracks of the ARC Rails far enough for the detent to engage.

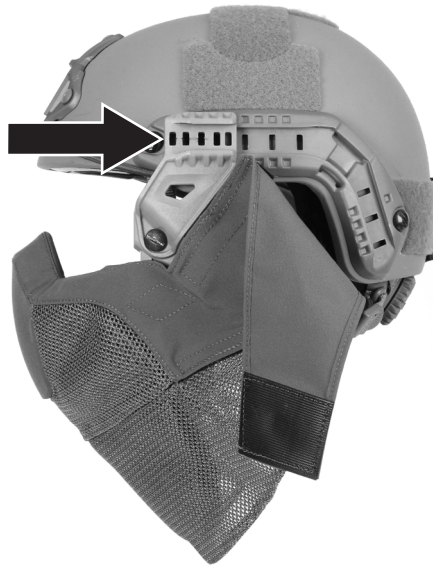

2 FASTEN REAR STRAPS

Pull the rear straps so they are snug and attach the hook fastener tabs to the helmet's loop fastener at the rear of the helmet.

NOTE: If your helmet does not have loop fastener, overlap the tabs and fasten them to each other.



TO REMOVE THE MANDIBLE: Unfasten the rear straps and slide the attachment arms out of the ARC Rails.

POSITION ADJUSTMENT

1 DETACH SIDE PANELS

Detach the side panels from the mandible arms.

2 ADJUST MANDIBLE POSITION

Loosen the adjustment screws to adjust the mandible arms to the desired vertical or fore-aft position and tighten the screws to hold.

3 REATTACH SIDE PANELS

Reattach the side panels to the mandible arms.

